



Drone-Sky-Hook

High Intensity LED Searchlight for DJI Phantom 4 / Phantom 3

Model numbers: DSH-LSL3-P4; DSH-LSL3-P3

Quick Installation & Operation Guide v1.0

<p>1</p>	<p>2</p>	<p>3</p>
<p>Slide the FRONT SIDE of the LED bracket over the FRONT RIGHT landing gear until it locks in place</p>	<p>Slide the REAR SIDE of the LED bracket over the REAR RIGHT landing gear until it locks in place</p>	<p>IMPORTANT: Route the spiral wire BEHIND the REAR RIGHT and REAR LEFT landing gear</p>
<p>4</p>	<p>5</p>	<p>6</p>
<p>Slide the FRONT SIDE of the Battery-pack bracket over the FRONT LEFT landing gear until it locks in place</p>	<p>Slide the REAR SIDE of the Battery-pack bracket over the REAR LEFT landing gear until it locks in place</p>	<p>Verify that the spiral wire is routed BEHIND both REAR landing gears</p>
<p>7</p>	<p>8</p>	<p>RED = Charging GREEN = Fully Charged</p>
<p>Route the GREY wire between the Battery-pack bracket and the landing gear</p>	<p>Connect the GREY wire plug to the Sky Hook's AUX CON port and verify it is locked in place</p>	<p>CHARGING: Connect the Micro USB cable to the battery-pack and to a USB charger</p>
=====		
<p>AUX Blue LED is ON</p>		
<p>Operation when combined with the Sky Hook Release PLUS device: Turn ON the Sky Hook's AUX Port to set the Searchlight ON.</p> <ol style="list-style-type: none"> 1. <u>Manual operation:</u> Click 3 times on the Sky Hook's FUNC push-button 2. <u>Drone's remote:</u> Click 3 times on the assigned C1/C2 button 3. <u>Drone's remote:</u> Rotate the drone 2 FAST RIGHT Turns (clock-wise) 		<p>Operation when installing only the Searchlight: Connect the GREY wire plug to the port socket on the battery pack to set the Searchlight ON.</p> <p>* Remote On/Off not available for this setup *</p>